

**To turn the TV on, press the DISPLAY ON/OFF
BUTTON**

To watch Cable TV, press the TV button.

**Channels can be changed using the Channel
Up and Channel Down buttons.**

**Volume can be adjusted up and down by
turning the Volume knob.**