

To turn the TV on, press the DISPLAY ON/OFF BUTTON

To watch Cable TV, press the TV button. Channels can be changed using the Channel Up and Channel Down buttons.

Below the TV are located HDMI, VGA + Audio, and Composite Video inputs. You can connect your device to one of these buttons, and then push the HDMI, VGA, or Video buttons to display that device on the television.

Volume for all sources can be adjusted up and down by turning the Volume knob.