

CROMWELL LOUNGE STAGE

PROJECTION AND SOUND SYSTEM INSTRUCTIONS

- To use the microphone connections:
 - There are 6 microphone connections on the stage, three to the left of the screen and three to the right of the screen
 - These microphones are always active, even if the system is off, but you can not adjust the volume of the microphones unless you turn the system on first.
 - To turn the system on, press anywhere on the screen of the touch screen controller.
 - You can then press the MIC VOLUME button and adjust the microphone volume using the touch screen.
- To use the projector:
 - First, touch the touch screen to turn the system on. This will NOT turn the projector on.
 - Next, select a video source using the buttons on the right hand side of the touch screen controller. This will turn the projector on and lower the screen.
 - There is a BluRay/DVD player in the equipment rack. To display it, press the BluRay button. The touch screen will show the buttons you would find on a remote control, and you can use the VOLUME UP, DOWN and MUTE buttons to adjust the volume.
 - To display a cable TV channel, press the CATV button.
 - On the wall of the stage there are inputs for HDMI, VGA, Component Video and Composite A/V. If you wish to use an external device through one of these connections, first connect the source to the wall plate, then select the button on the right side of the touch screen for the input you are using.
 - If you wish to dim the lights, the light control is located on the wall outside the equipment closet. Preset #2 is designed for optimal lighting for projection.
- When you have finished using the system, make sure to turn the system off, by pressing the button labeled SYSTEM OFF, and saying YES when it asks if you are sure you wish to turn the system off.